 


3-1. Lexus Display Audio system

Lexus Display Audio system*

By using the Lexus Display Audio controller, you can control the audio system and hands-free system, etc.

■ Lexus Display Audio controller

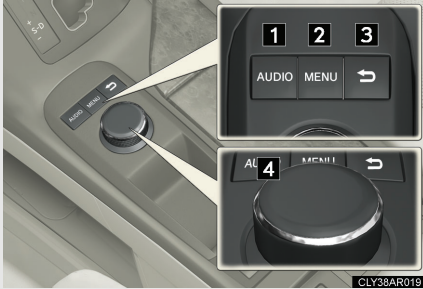

 
- 1 Displaying the audio control screen (→P. 434)
- 2 Displaying the “Menu” screen (→P. 397)
- 3 Displaying the previous screen
- 4 Turn or move the controller to select a function, number and screen button.

Push the controller to enter the selected function, number and screen button.

*: If equipped

■ “Menu” screen


To display the “Menu” screen, press the “MENU” button on the Lexus Display Audio controller.

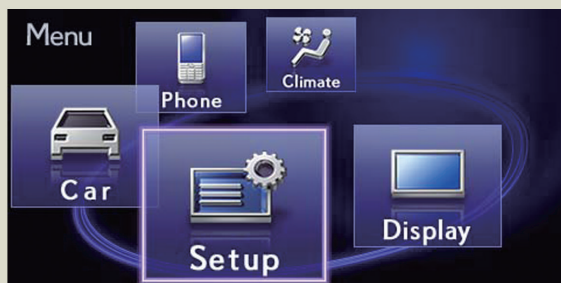

Button	Function
“Climate”	Automatic air conditioning system (→P. 412)
“Phone”	Hands-free system (→P. 502)
“Car”	Vehicle information (→P. 409)
“Setup”	Setup menu (→P. 403)
“Display”	Display settings (→P. 401)

Lexus Display Audio system operation

 
■ Using the Lexus Display Audio controller

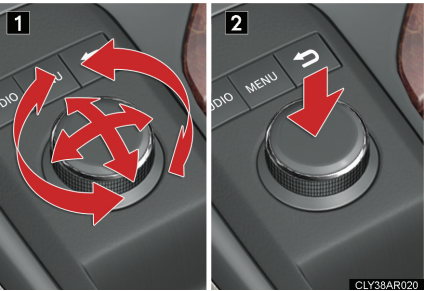




- 1 Select: Turn or move the controller.
- 2 Enter: Push the controller.

 
■ Basic screen operation

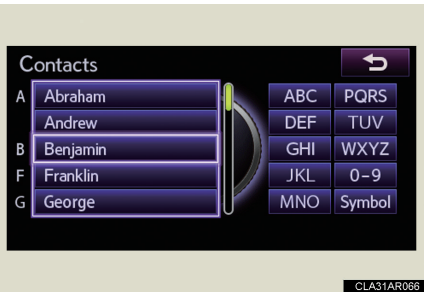
When a list is displayed, use the appropriate button to scroll through the list.



 : This indicator turn on when the list box is selected.

  : To scroll to the next or previous page.

  : To return to the previous screen.

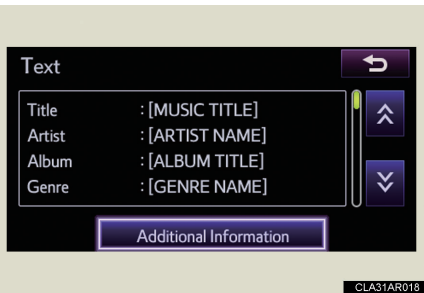

■ When using the screen

- Under extremely cold conditions, the Lexus Display Audio controller may react slowly.
- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display Settings" screen (→P. 401) or remove your sunglasses.

CAUTION

■ Using the Lexus Display Audio controller

- Do not allow fingers, fingernails or hair to become caught in the Lexus Display Audio controller as this may cause an injury.
- Be careful when touching the Lexus Display Audio controller in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

NOTICE

 
■ To prevent the Lexus Display Audio controller malfunction

- Do not allow the Lexus Display Audio controller to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Lexus Display Audio controller to excessive pressure or strong impact as the controller may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Lexus Display Audio controller as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Lexus Display Audio controller.
- RX350: If your hand or any object is on the Lexus Display Audio controller when the "ENGINE START STOP" switch is turned to ACCESSORY mode, the Lexus Display Audio controller may not operate properly.
- RX450h: If your hand or any object is on the Lexus Display Audio controller when the "POWER" switch is turned to ACCESSORY mode, the Lexus Display Audio controller may not operate properly.

Display settings

You can adjust the contrast and brightness of the screen and also turn the display off.

To display the “Display Settings” screen, press the “MENU” button on the Lexus Display Audio controller and then select “Display” on the “Menu” screen.

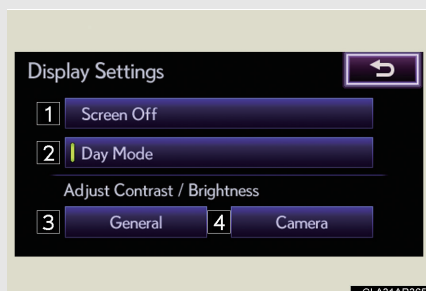

1 Turn off screen

The screen is turned off. To turn it on, press the “AUDIO” or “MENU” button on the Lexus Display Audio controller.

2 Changes to day mode. (→P. 401)

3 Adjust screen contrast/brightness (→P. 402)

4 Adjust screen contrast/brightness of rear view monitor camera (→P. 402)

Changing between day mode and night mode

When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by selecting “Day Mode”.

If the screen is set in day mode with the headlight switch turned on, this condition is memorized even with the “ENGINE START STOP” switch (RX350) or the “POWER” switch (RX450h) is turned off.

Adjusting the screen contrast/brightness

STEP 1 Select “General” or “Camera” on the “Display Settings” screen.

STEP 2



Adjust the display as desired using “+” or “-”.

Select “Contrast” or “Brightness” using the “<<” or “>>”.


	“ - ”	“ + ”
“Contrast”	Weaker	Stronger
“Brightness”	Darker	Brighter

STEP 3 Select “OK”.

3-1. Lexus Display Audio system

Setup menu

 You can change the Lexus Display Audio system to your desired setting. To display the “Setup” screen, press the “MENU” button on the Lexus Display Audio controller and then select “Setup” on the “Menu” screen.

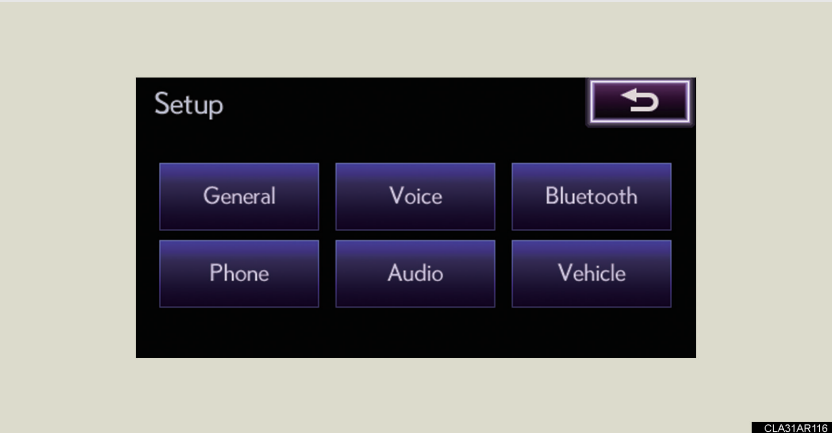

Button	Page
“General”	P. 404
“Voice”	P. 408
“Bluetooth”*	P. 542
“Phone”	P. 529
“Audio”	P. 407
“Vehicle”	P. 406

 
*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

General settings

This screen is used for various settings.

STEP 1 Display the “Setup” screen. (→P. 403)

STEP 2 Select “General” on the “Setup” screen.

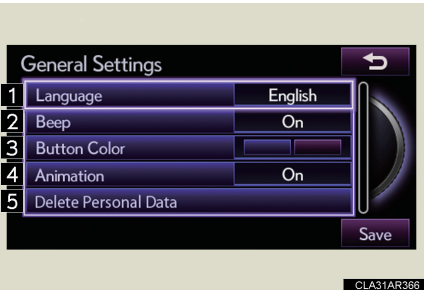

1 Select language (→P. 404)

2 Beep on/off

3 Select button color

4 Animation on/off

 
The animation effect for audio source selection screen, screen transitions, etc. can be set to “On” or “Off”.

5 Personal data can be deleted.
(→P. 405)

STEP 3 When you complete settings, select “Save”.

Selecting a language

STEP 1 Select “Language” on the “General Settings” screen.

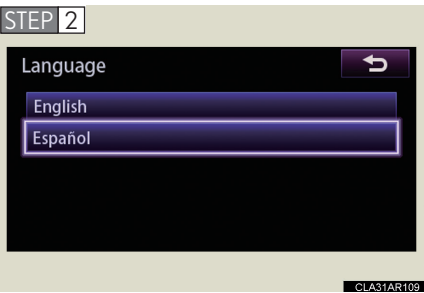


Select the desired language.

The selectable languages may differ depending on the model or region.

■ Delete personal data

STEP 1 Select “Delete Personal Data” on the “General Settings” screen.

 STEP 2

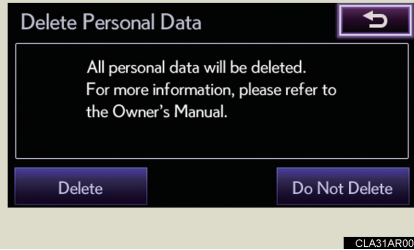

Select “Delete”.

Check carefully beforehand, as data cannot be retrieved once deleted.

STEP 3 A confirmation screen will be displayed. Select “Yes”.

The following personal data can be deleted or turned to their default settings.

 
- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® devices data
- Phone sound settings
- Detailed Bluetooth® settings
- Sound settings
- Preset switch data
- Last used radio station

Vehicle settings

This screen is used for various vehicle settings.

STEP 1 Display the "Setup" screen. (→P. 403)

STEP 2 Select "Vehicle" on the "Setup" screen.

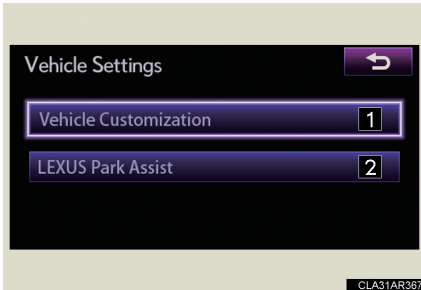


1 Vehicle customization settings (→P. 406)

2 LEXUS park assist settings* (→P. 316)

■ Vehicle customization settings

Various setting can be changed.

 STEP 1 Select "Vehicle Customization" on the "Vehicle Settings" screen.

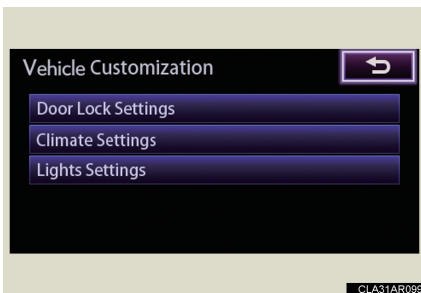

Refer to the list of settings that can be changed for details. (→P. 980)

STEP 2 When you complete settings, select "Save".

 
*: If equipped

Audio settings

This screen is used for various audio settings.

STEP 1 Display the "Setup" screen. (→P. 403)

STEP 2 Select "Audio" on the "Setup" screen.

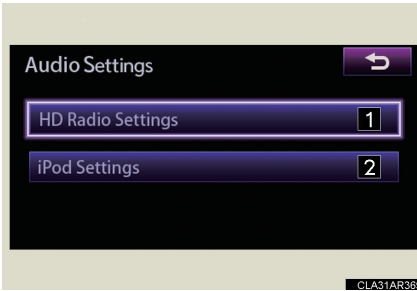

1 HD Radio™ technology settings (→P. 443)

 
2 iPod setting (→P. 407)

■ iPod setting

This screen is used for iPod setting.

STEP 1 Select "iPod Settings" on the "Audio Settings" screen. (→P. 407)

STEP 2

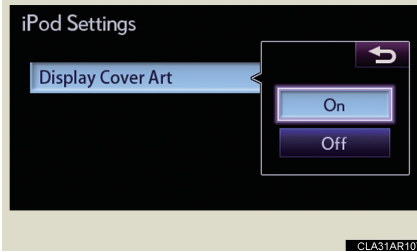

Select "Display Cover Art".

"On" or "Off" can be selected to display captured image/iPod cover art in the screen.

 
STEP 3 When you complete settings, select "OK".

Voice settings

This screen is used for guidance for Bluetooth[®] hands-free systems setting.

STEP 1 Display the “Setup” screen. (→P. 403)

STEP 2 Select “Voice” on the “Setup” screen.

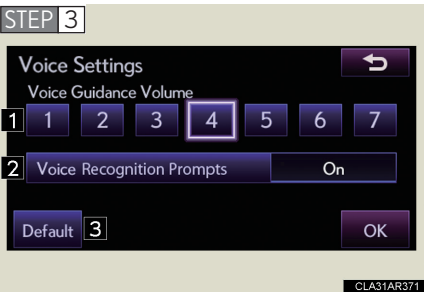

- 1** Voice guidance volume setting
- 2** Voice recognition prompts on/off
- 3** Restore default settings

STEP 4 When you complete settings, select “OK”.

Vehicle information

 
► RX350

This screen can be used to display the fuel consumption.

To display the “Trip Information” or “History” screen, press the “MENU” button on the Lexus Display Audio controller and then select “Car” on the “Menu” screen.

► RX450h

This screen can be used to display the status of your hybrid system and fuel consumption. (→P. 44)

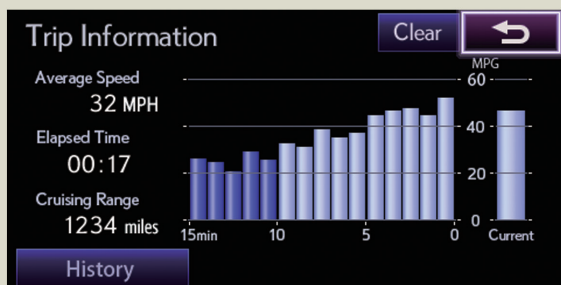


CLAS1AR122

Fuel consumption

Trip information

 If the “Trip Information” screen does not appear, select “Trip Information”.

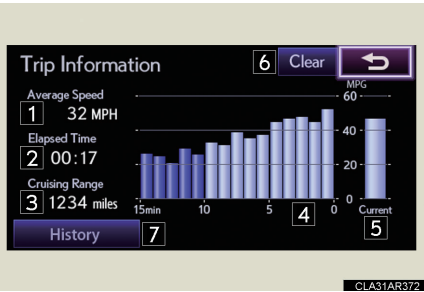


- 1 Average vehicle speed
- 2 Elapsed time
- 3 Cruising range
- 4 Previous fuel consumption per minute
- 5 Current fuel consumption
- 6 Reset the trip information data
- 7 “History” screen appears

These images are examples only, and may vary slightly from actual conditions.

History

 If the “History” screen does not appear, select “History”.

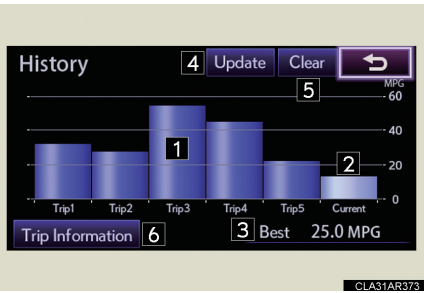

- 1 Previous fuel economy record
- 2 Current fuel economy
- 3 Best recorded fuel economy
- 4 Update the past record data
- 5 Reset the past record data
- 6 “Trip Information” screen appears

These images are examples only, and may vary slightly from actual conditions.

■ Updating the past record data

Selecting "Update" on the "History" screen will update the past record data.

Also, the average fuel consumption displayed in the multi-information display will be reset at the same time.